


## Overview

# Lexan film fastener, bottom - PU = 100 pcs

**Product number:** 68100102

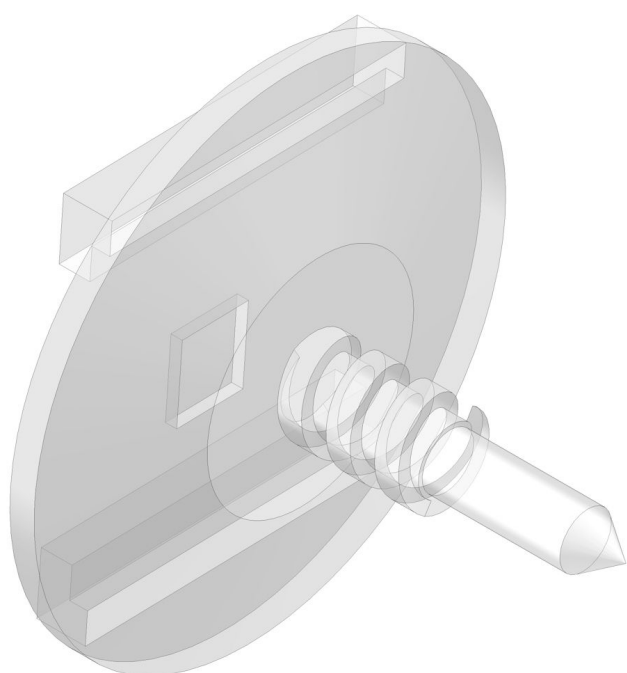

## Options

### Version

Type 1 - Buttom

Type 1 - Top

Type 1 - complete

Type 2 - Complete

Type 2 - Top

Type 2 / Buttom

## Description

Our film fasteners are applied for attaching a bubble wrap as an additional isolating material to greenhouse walls (glass or twin-wall sheets).

Bubble wrap is impaled onto the bottom part of the film fastener previously stuck with silicon Contractor onto the wall. Afterwards the upper part of the film fastener is screwed up from above to firmly fix the bubble wrap.

The upper part of the film fastener can easily be unscrewed to be newly applied during winter seasons.